


## CONTINUOUS LEVEL TRANSDUCER SCREWED PROCESS CONNECTION

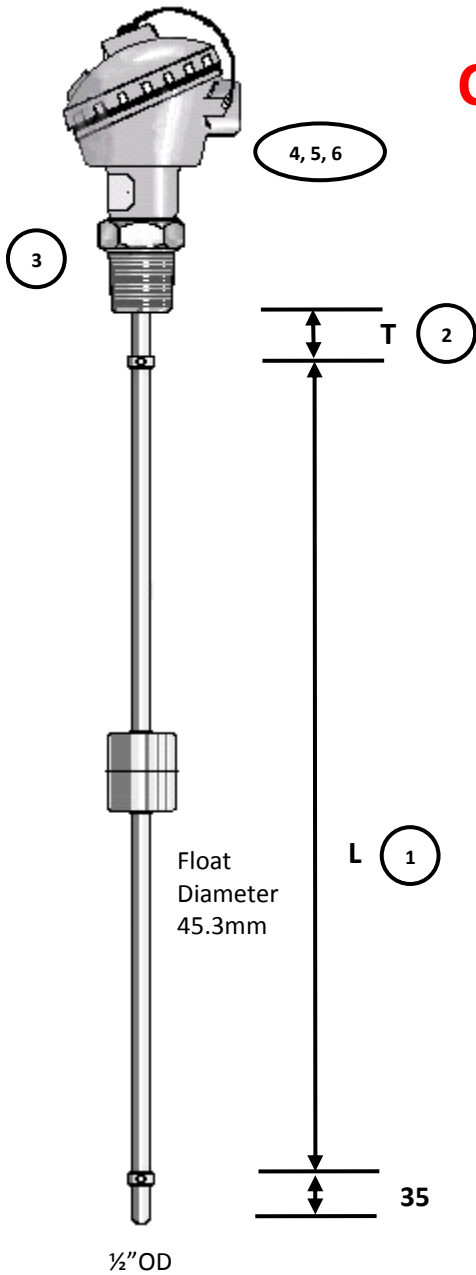

CLTT-□-□-□-□-□-□

- 6 **RTD SENSOR**  
R=required, 0=none
- 5 **HAZARDOUS AREA**  
EX=Ex'ia', 0=STD
- 4 **HEAD TYPE** (Refer Data Sheet)  
A=KNE, B=KI, FL=SS, H=KPP, L=KNH\*\*
- 3 **SCREW THREAD**  
(Note 1/Note 2)
- 2 **LENGTH 'T'**  
(In mm)
- 1 **LENGTH 'L'**  
(In mm) (Note 3)

Length 'L' is the Calibrated Range

Length 'T' is the distance from the fitting to the range limit

\*\*Style 'L' Head(KNH) only needed if RTD sensor used

Note 1: Standard Screw Thread 2" BSP

Note 2: Minimum thread size 2" BSP/NPT

Note 3: Maximum Length – 'L' = 3000mm

### SELECTION

CLTT -          -          -          -          -          -         

1                    2                    3                    4                    5                    6

Special Requirements: \_\_\_\_\_

Data Sheet CLTT

[www.pyrosales.com.au](http://www.pyrosales.com.au)

Pyrosales NSW  
4 Wordie Place  
PADSTOW NSW 2211  
Tel: (02) 9790 1988  
Fax: (02) 9790 1040  
Email: [sales@pyrosales.com.au](mailto:sales@pyrosales.com.au)

Pyrosales Victoria  
Factory 4 Enterprise Way  
BAYSWATER VIC 3153  
Tel: (03) 9729 2100  
Fax: (03) 9720 5559  
Email: [vicsales@pyrosales.com.au](mailto:vicsales@pyrosales.com.au)

Pyrosales Queensland  
Unit 1, Lot 3, 70 Flanders Street  
SALISBURY QLD 4107  
Tel: (07) 3277 9400  
Fax: (07) 3277 9495  
Email: [qldsales@pyrosales.com.au](mailto:qldsales@pyrosales.com.au)